


TYPICAL POINT WELL
DEPARTMENT OF NATURAL RESOURCES

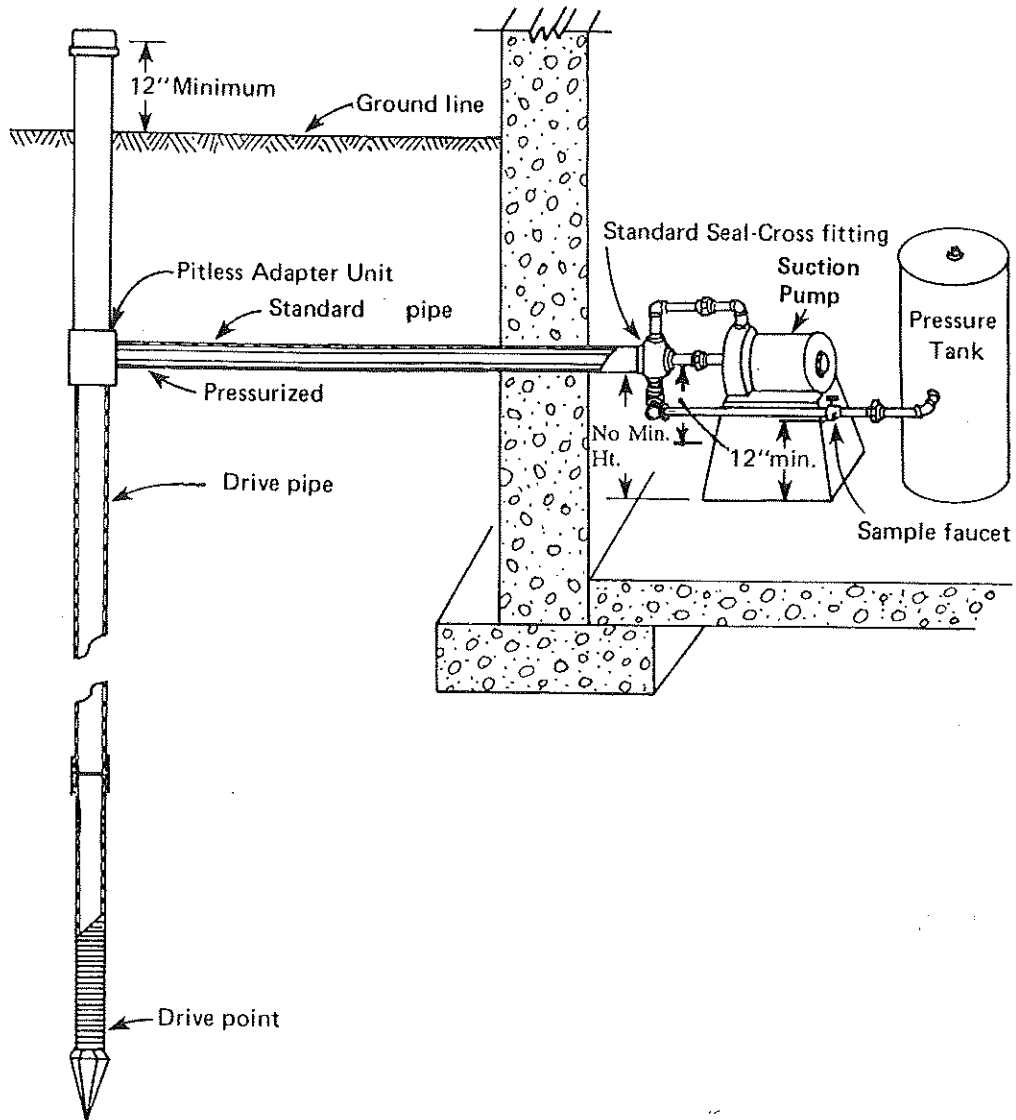

Shallow-well pump installation for a driven-point well. A pressure (box) elbow may be used to extend the pressurized conduit to a point above the basement floor. The pressure (box) elbow may be buried.